

FIG. 1

Replacement Sheet

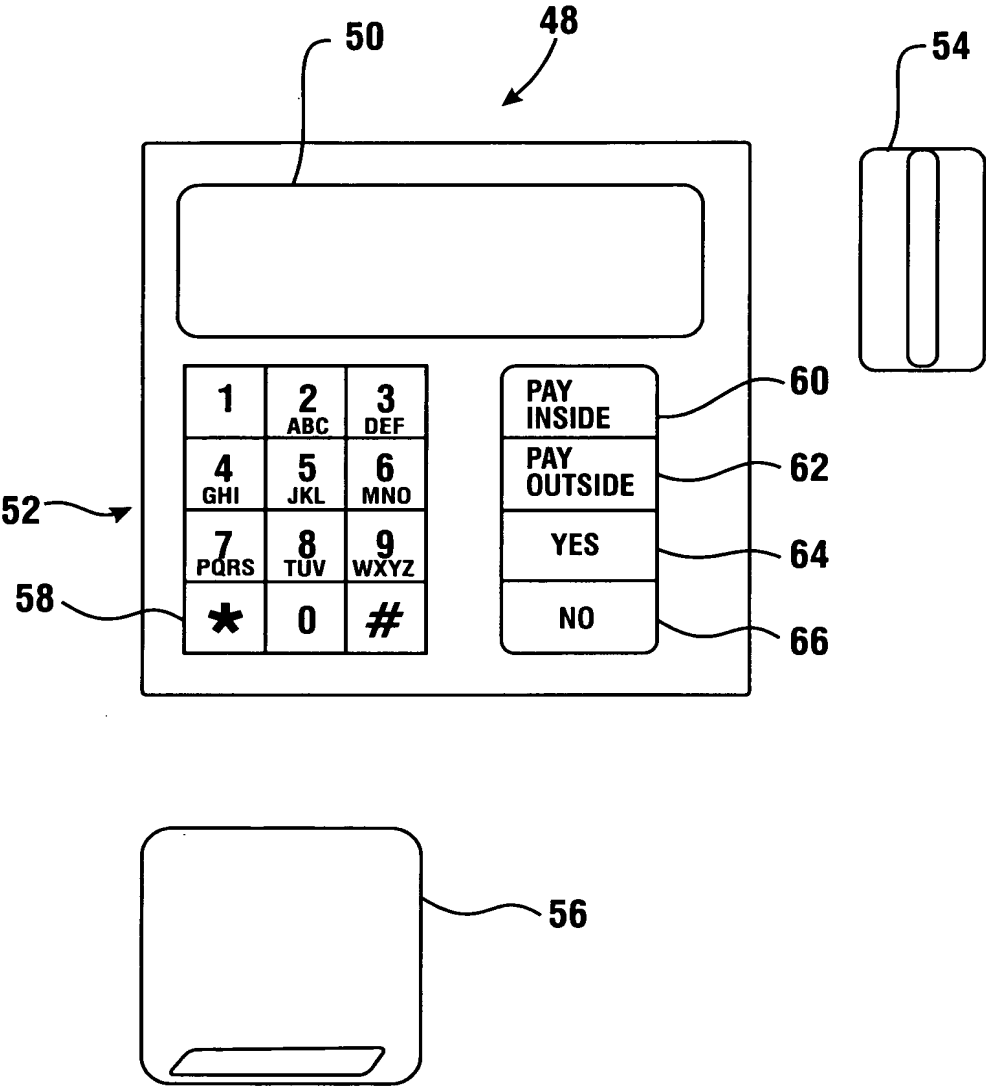 


FIG. 2

Replacement Sheet

FIG. 3

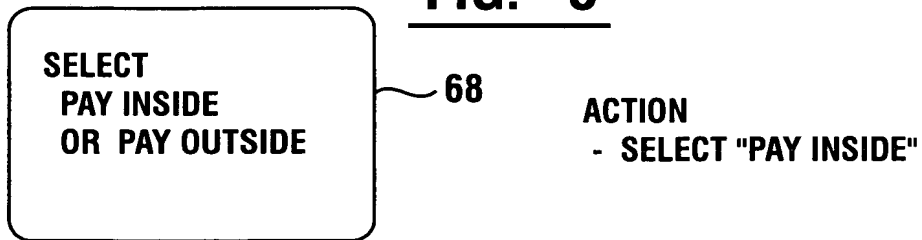 


FIG. 4

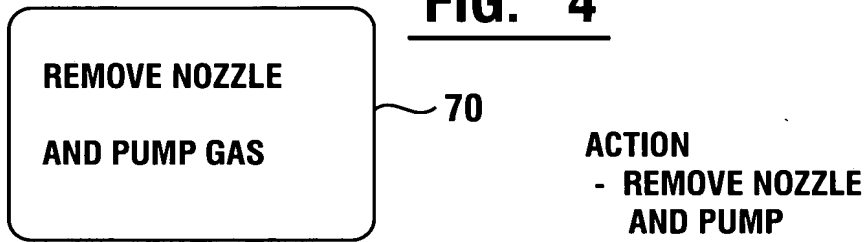 


FIG. 5

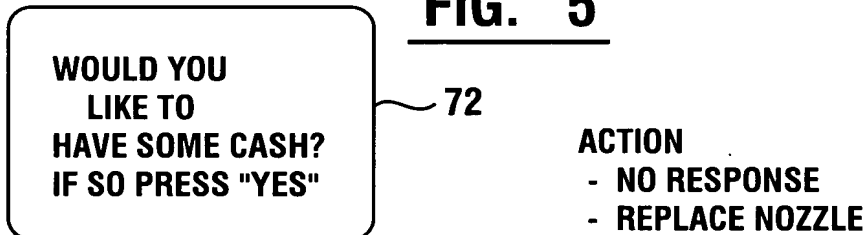 


FIG. 6

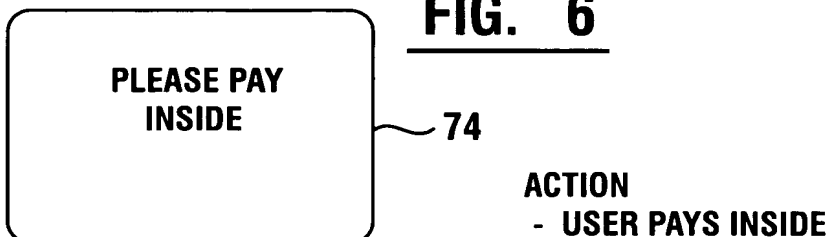 


FIG. 7

**SELECT
PAY INSIDE
OR PAY OUTSIDE**

76

ACTION

- USER SELECTS "PAY OUTSIDE"

FIG. 8

**PRESS
1 FOR CREDIT CARD
2 FOR DEBIT CARD
3 FOR STORED VALUE
CARD**

78

ACTION

**- USER SELECTS INPUT
FOR EXAMPLE "1" FOR
CREDIT CARD**

FIG. 9

**PLEASE INSERT
CREDIT CARD IN
CARD READER AND
WITHDRAW QUICKLY**

86

ACTION

**- USER INSERTS CARD
AND WITHDRAWS CARD**

FIG. 10

**REMOVE NOZZLE
AND PUMP GAS**

88

ACTION

- REMOVE NOZZLE AND PUMP

Replacement Sheet

FIG. 11

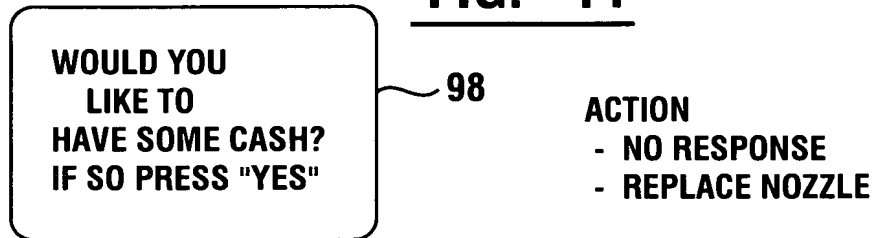 


FIG. 12

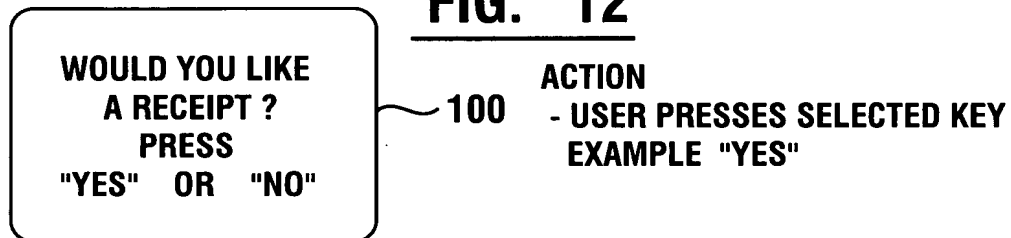 


FIG. 13

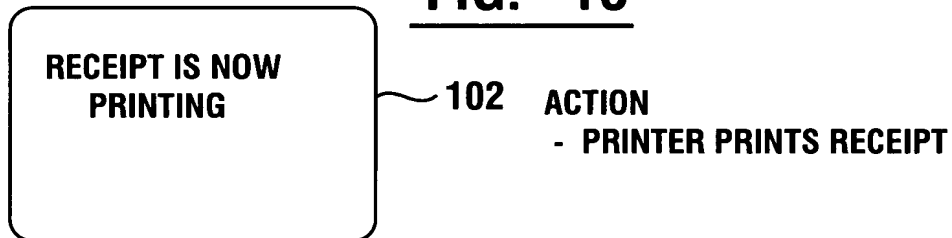 


FIG. 14

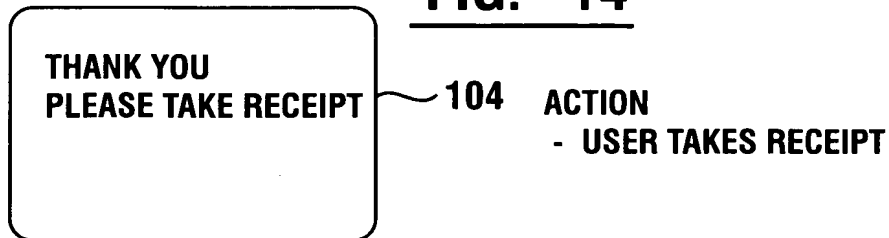 


FIG. 15

PLEASE ENTER YOUR
PIN NUMBER AND
THEN PRESS #
PRESS * TO CLEAR

92

ACTION

- USER INPUTS PIN AND
THEN #

FIG. 16

PLEASE INSERT
STORED VALUE CARD
INTO READER AS
FAR AS IT WILL GO

94

ACTION

- USER INSERTS STORED VALUE
CARD

FIG. 17

SORRY, WE ARE
UNABLE TO PROCESS
YOUR TRANSACTION

96

ACTION

- MACHINE RETURNS TO FIRST
SCREEN AFTER TIME OUT

Replacement Sheet

FIG. 18

PLEASE INPUT AMOUNT
BY PRESSING KEYS
THEN PRESS #
MAXIMUM \$100

106

ACTION

- USER INPUTS AMOUNT
AND #

EXAMPLE \$100 INPUT

FIG. 19

\$100 FROM
CREDIT CARD
PRESS "YES" TO CONFIRM
"NO" TO INPUT NEW AMOUNT

108

ACTION

- CUSTOMER PRESSES
APPROPRIATE BUTTON

EXAMPLE "YES"

Replacement Sheet

FIG. 20

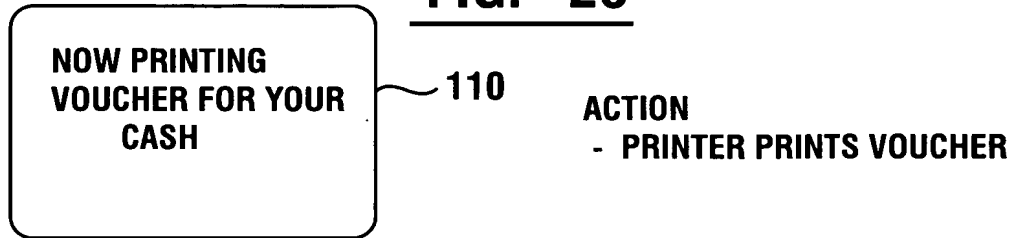 


FIG. 21

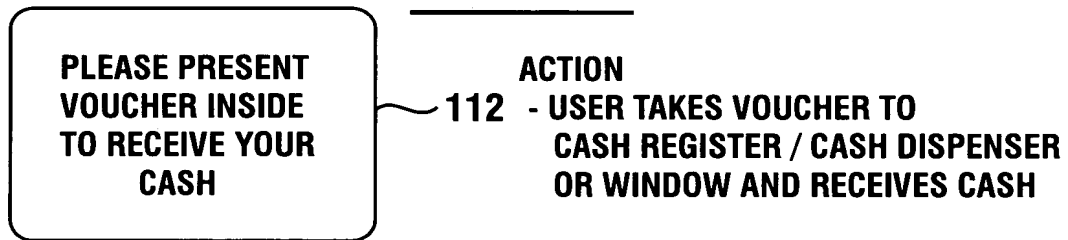 


FIG. 22

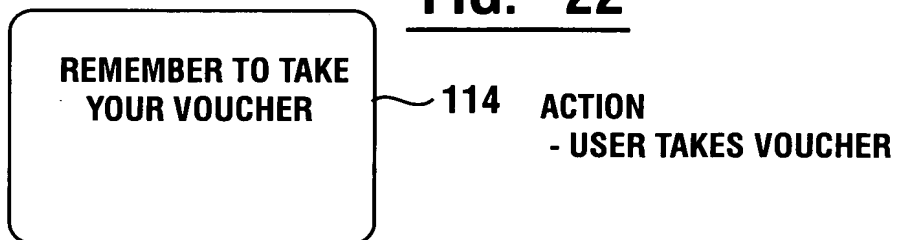 


FIG. 23

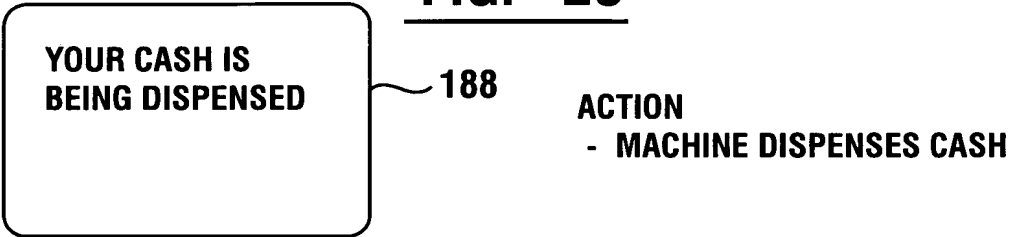
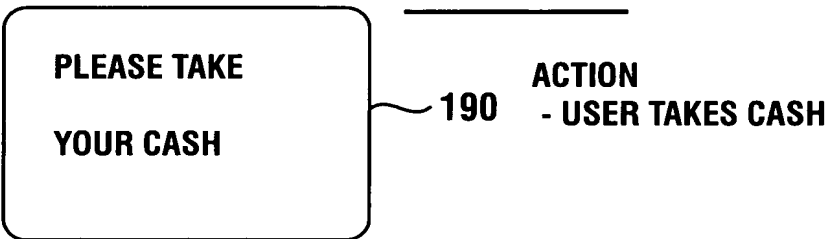 


FIG. 24

 

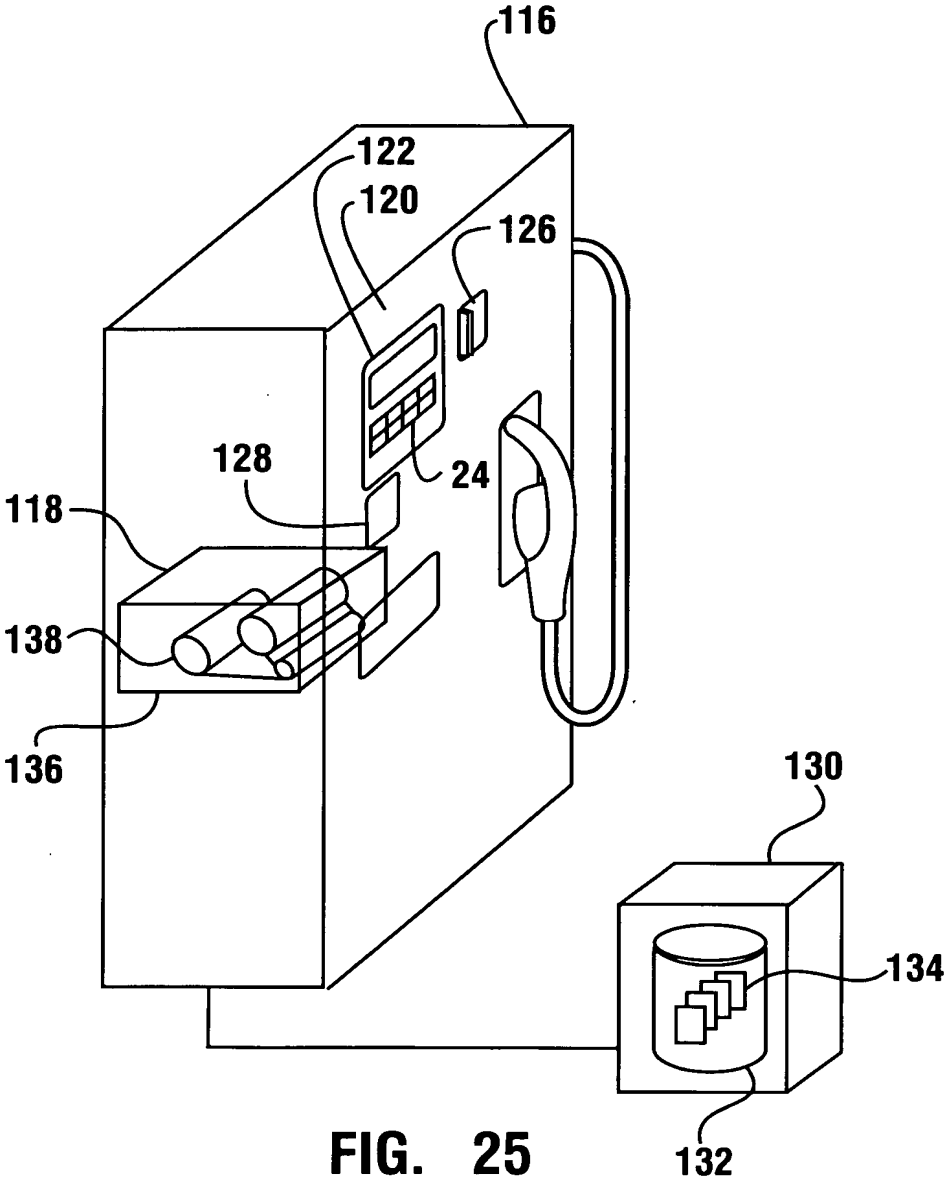 


FIG. 26

PAY BY
1 **CARD**
2 **CASH**

192

ACTION

- USER SELECTS CASH OR CARD
EXAMPLE CASH

FIG. 27

**INSERT BILLS INTO
BILL ACCEPTOR BELOW**

**PRESS "1" TO RETURN TO
FIRST SCREEN**

194

ACTION

- USER INSERTS NOTES INTO
NOTE ACCEPTOR OR RETURNS
TO BEGINNING
EXAMPLE NOTE INPUT

FIG. 28

AVAILABLE CREDIT
\$20.00
**PRESS "1" TO RETURN TO
FIRST SCREEN**
PRESS "2" TO BEGIN PUMPING

196

ACTION

- USER INSERTS MORE NOTES
OR PRESSES OTHER OPTIONS
EXAMPLE USER PRESSES "2"

FIG. 29

**REMOVE NOZZLE
AND PUMP GAS**

198

ACTION

- USER REMOVES NOZZLE
AND PUMPS
- PUMP STOPS WHEN AVAILABLE
CREDIT IS REACHED OR
CUSTOMER SHUTS OFF

Replacement Sheet

FIG. 30

**YOUR AVAILABLE
CREDIT IS GREATER
THAN YOUR CHARGE
A CASH VOUCHER FOR
THE DIFFERENCE IS
PRINTING**

200

**ACTION
- MACHINE PRINTS VOUCHER
FOR DIFFERENCE**

FIG. 31

**PLEASE PRESENT
VOUCHER INSIDE
TO RECEIVE YOUR
CASH**

202

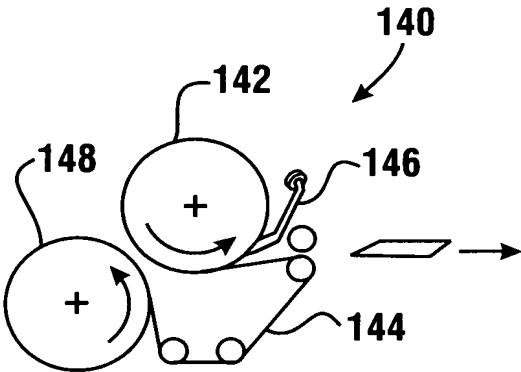 


FIG. 32

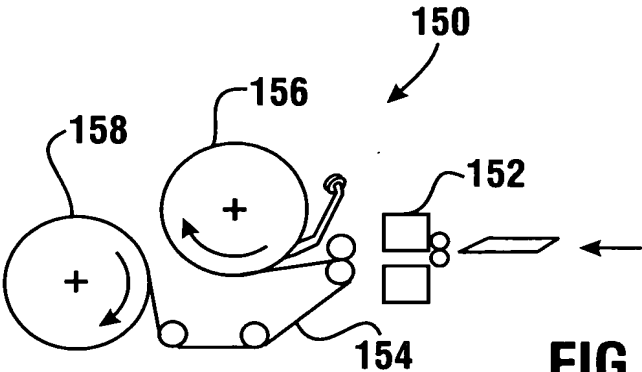 


FIG. 33

Replacement Sheet

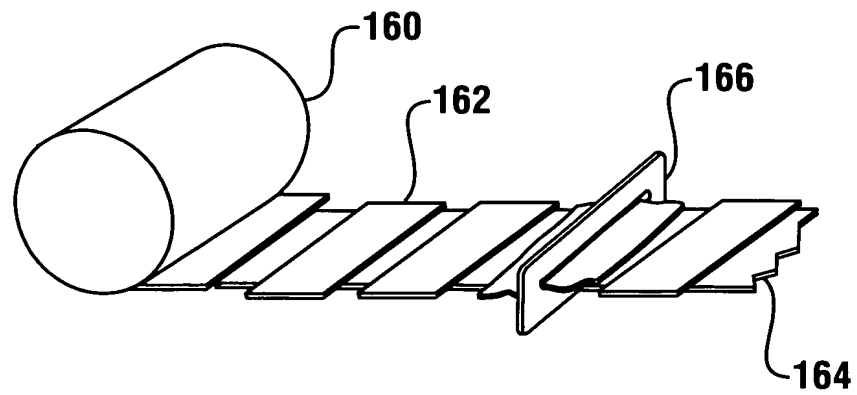 


FIG. 34

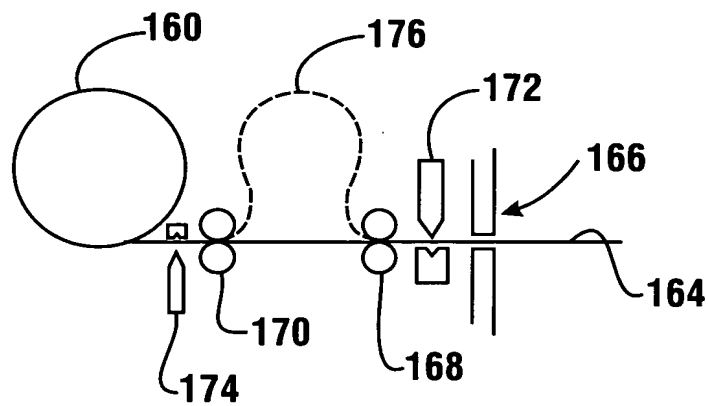 


FIG. 35

Replacement Sheet

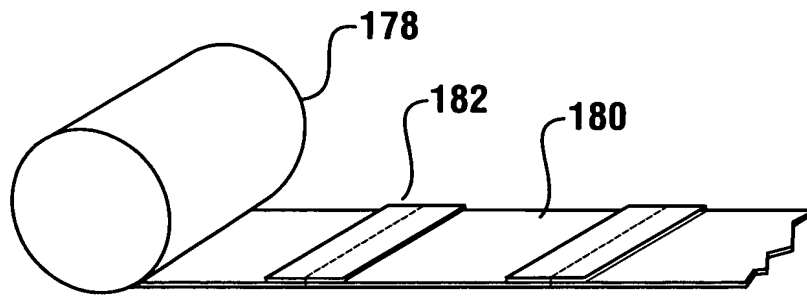 


FIG. 36

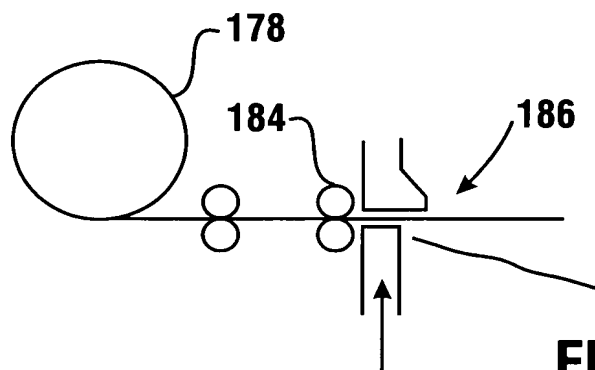 


FIG. 37


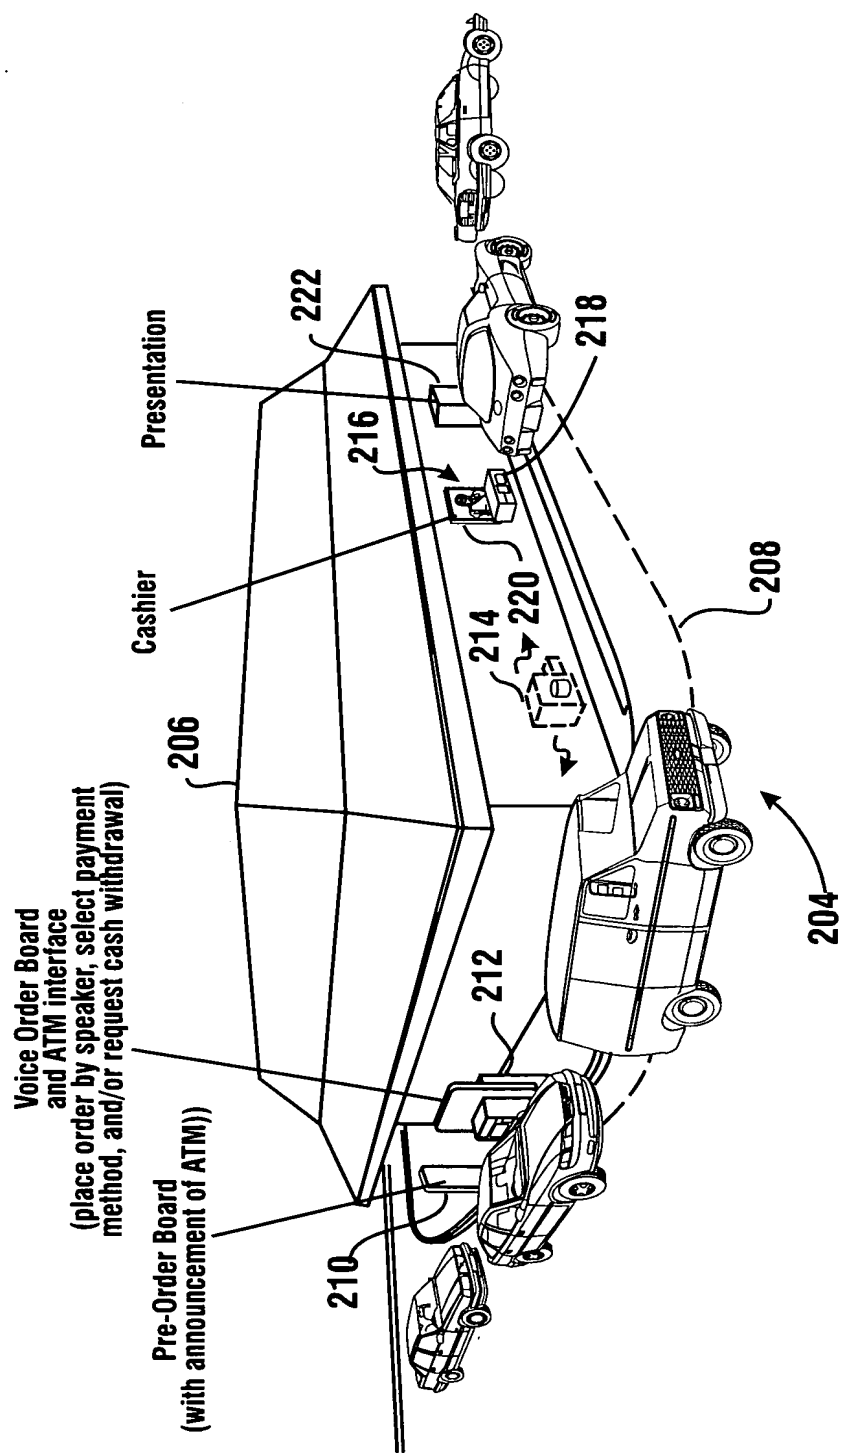 


FIG. 38

 Replacement Sheet

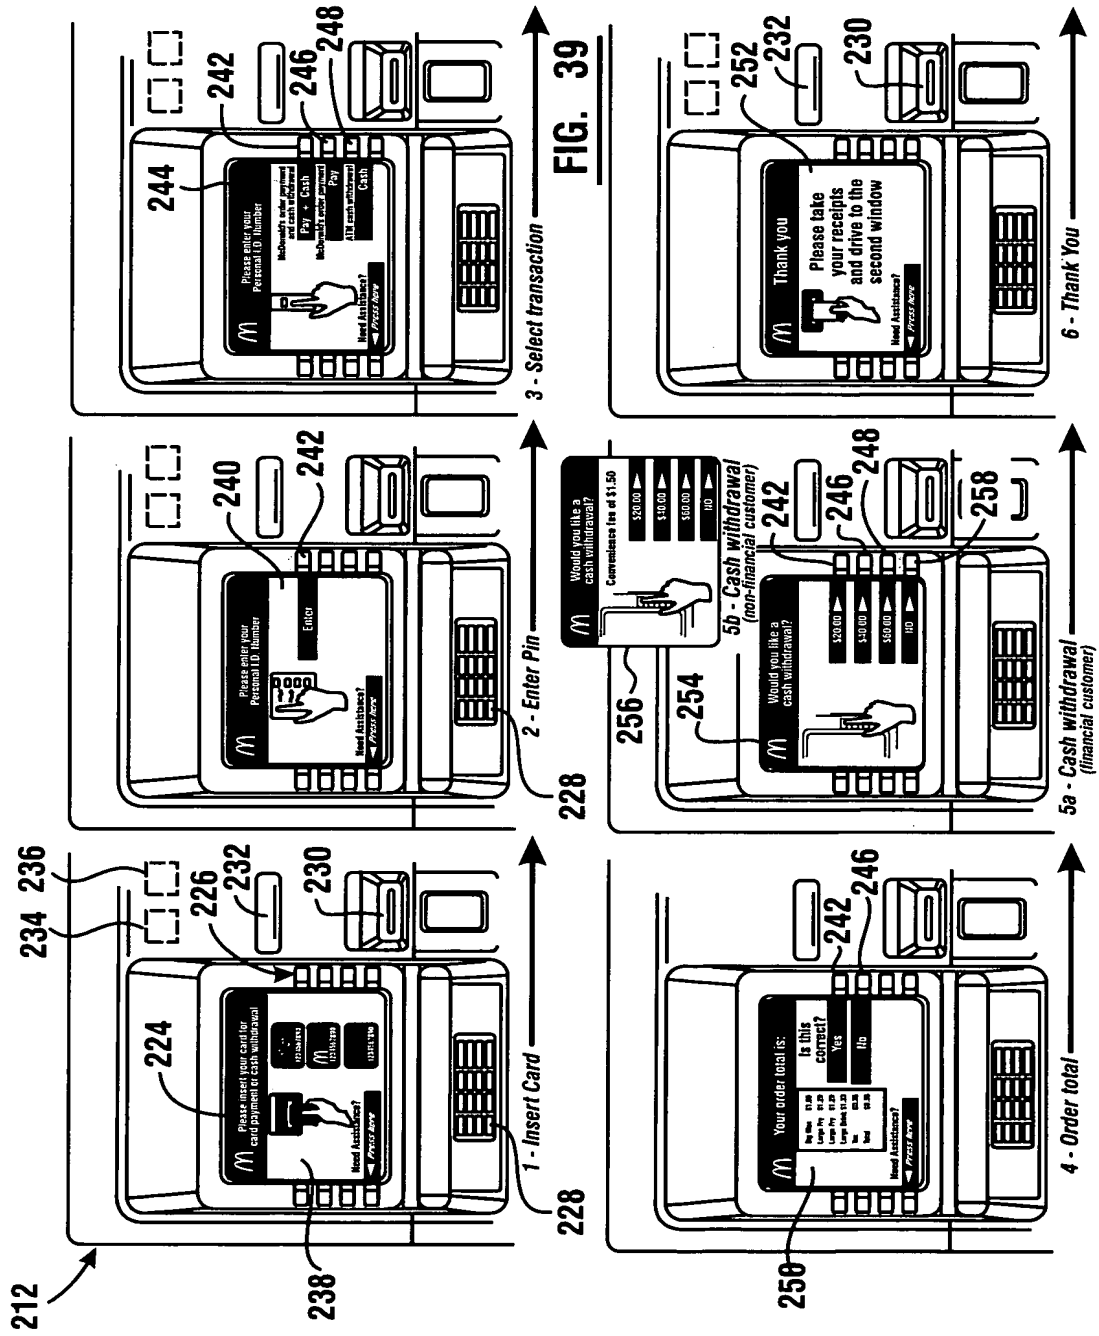

Replacement Sheet



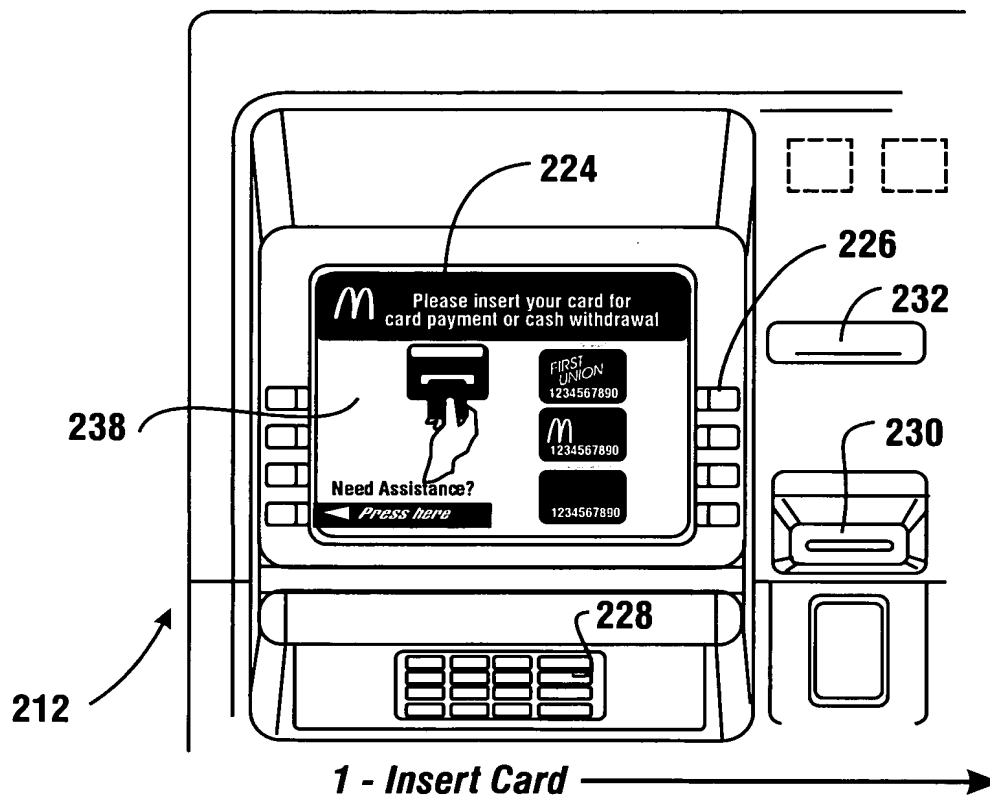 



FIG. 40

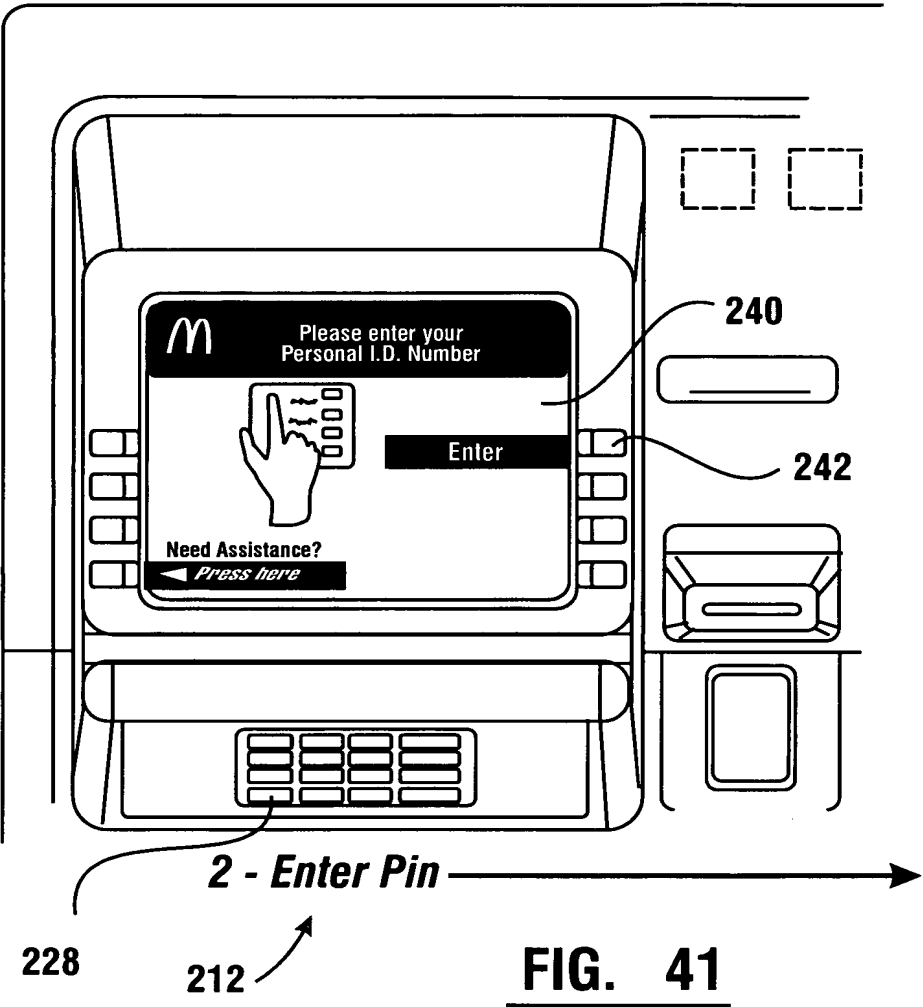 

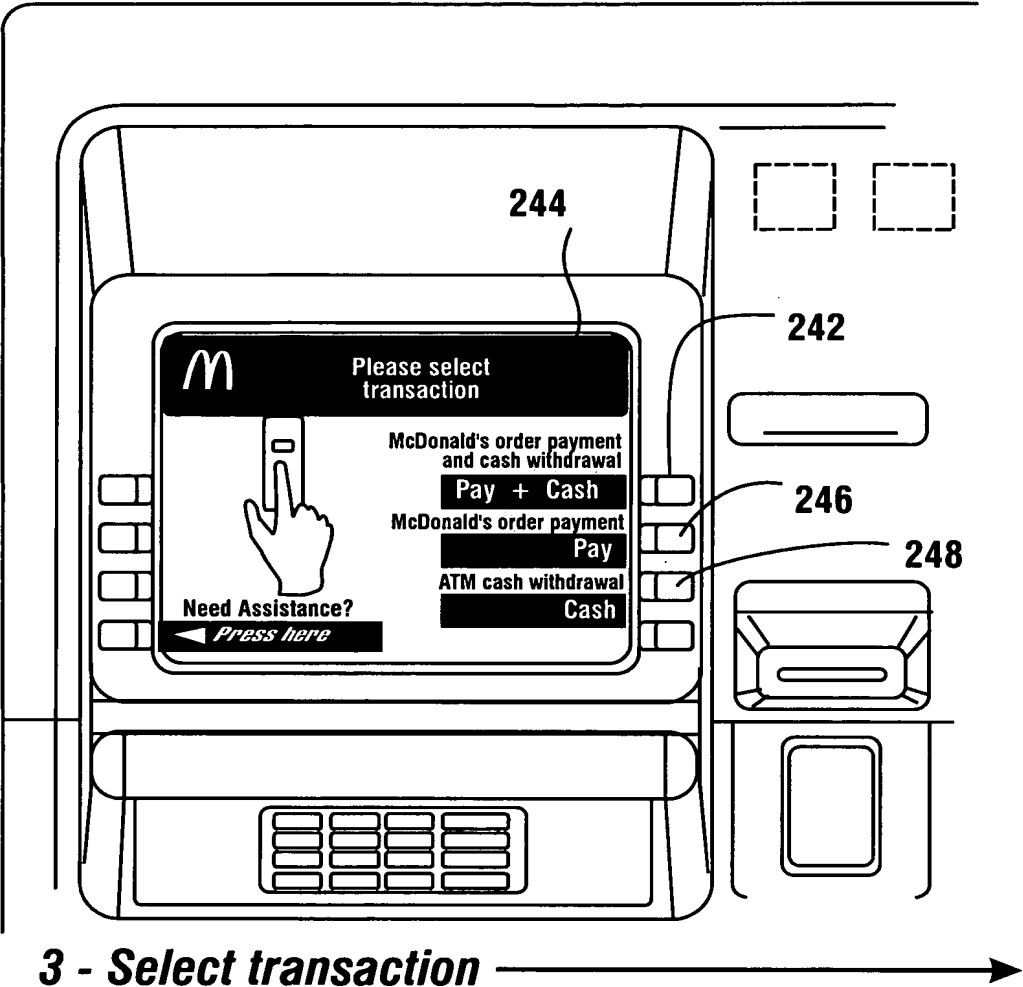 

212

FIG. 42

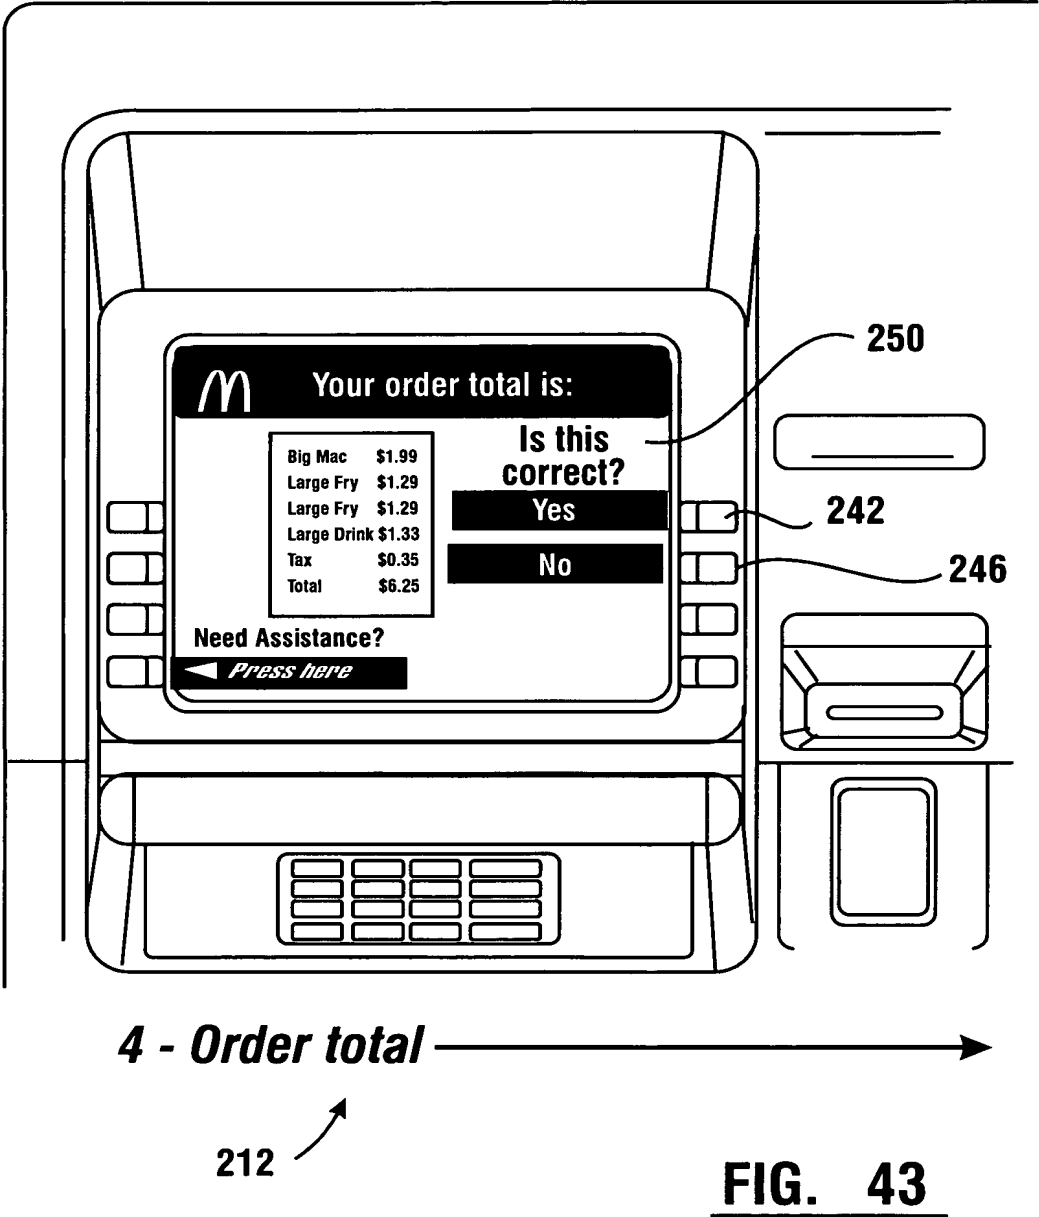 

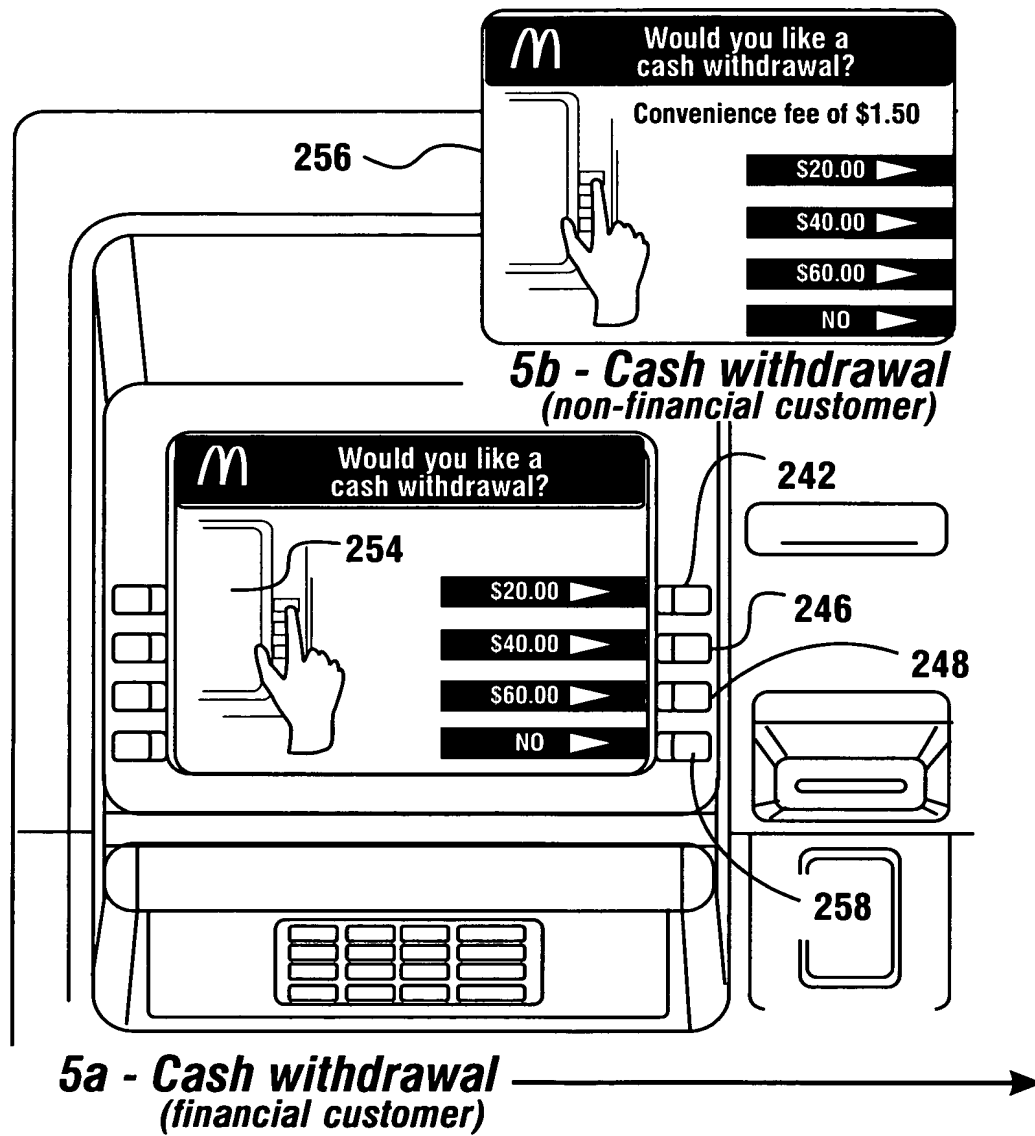 
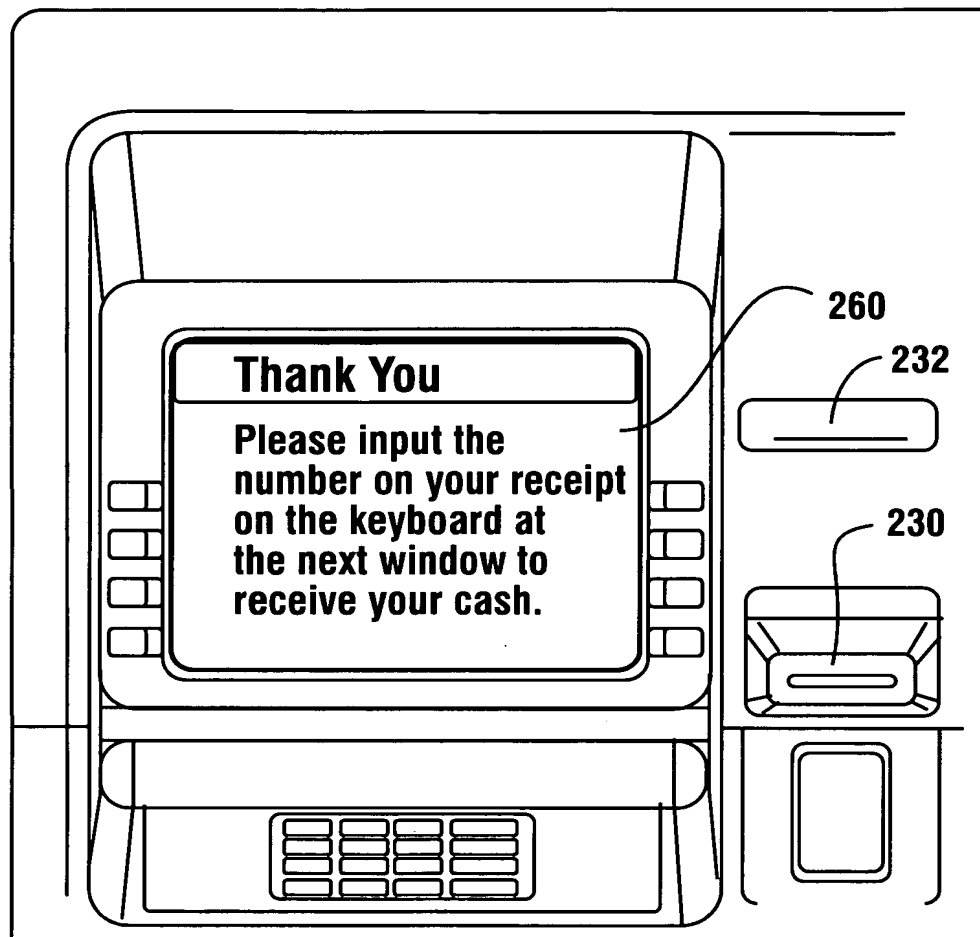 


FIG. 44

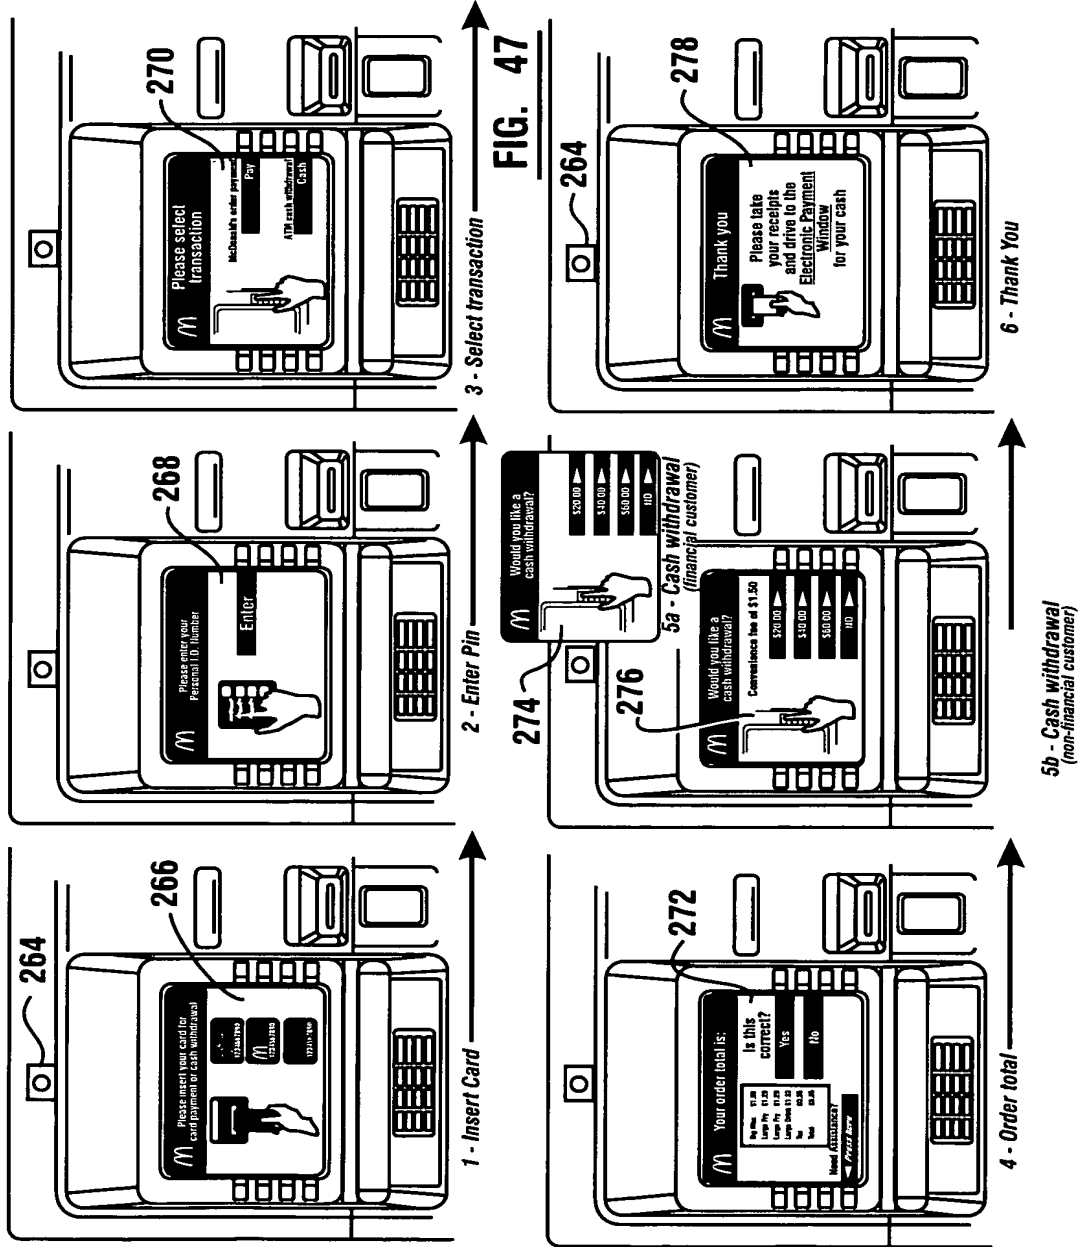 


FIG. 45



6 - Thank You

FIG. 46



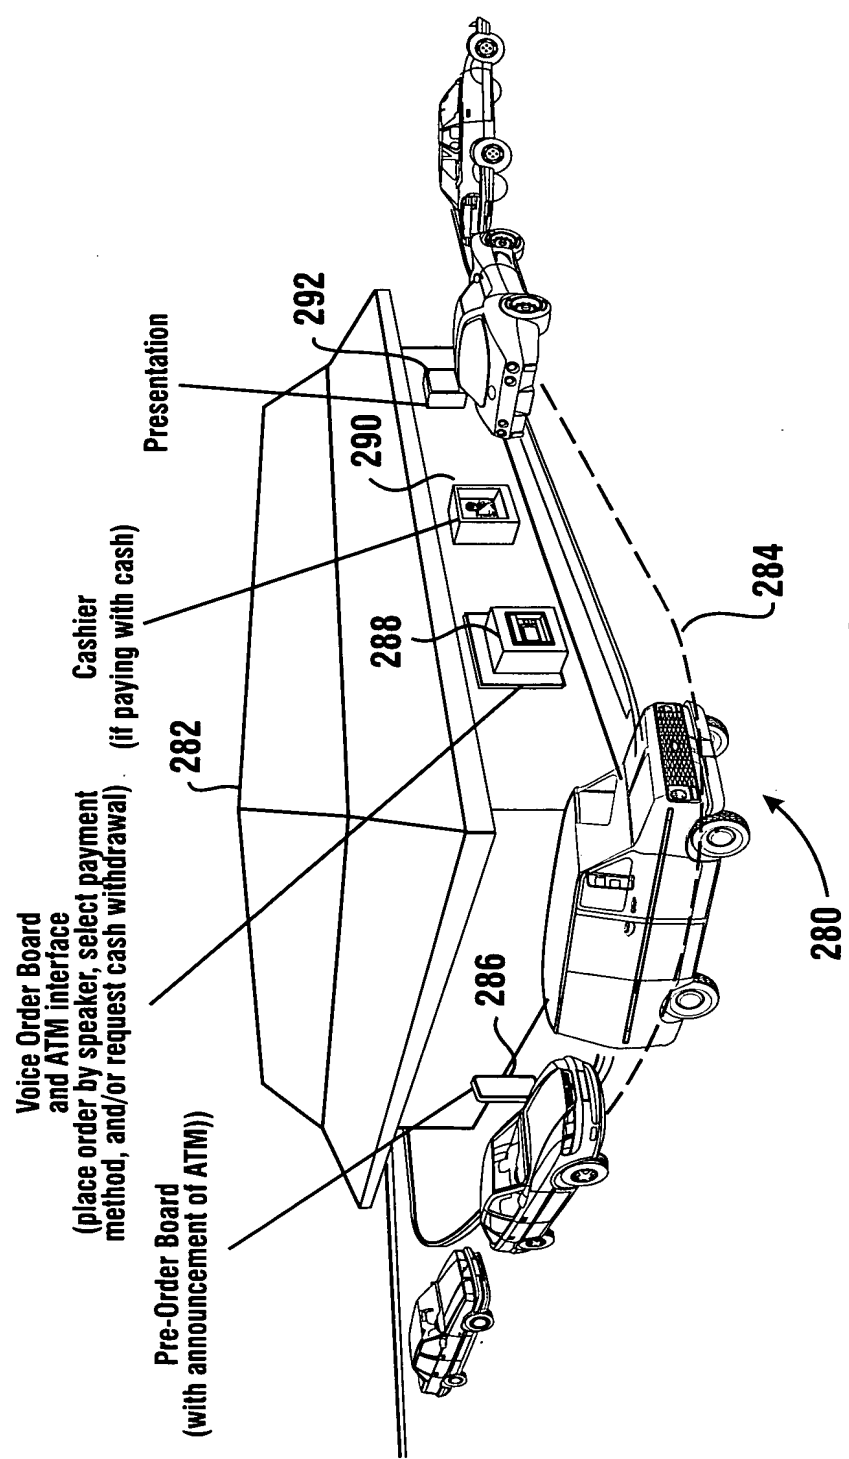 


FIG. 48

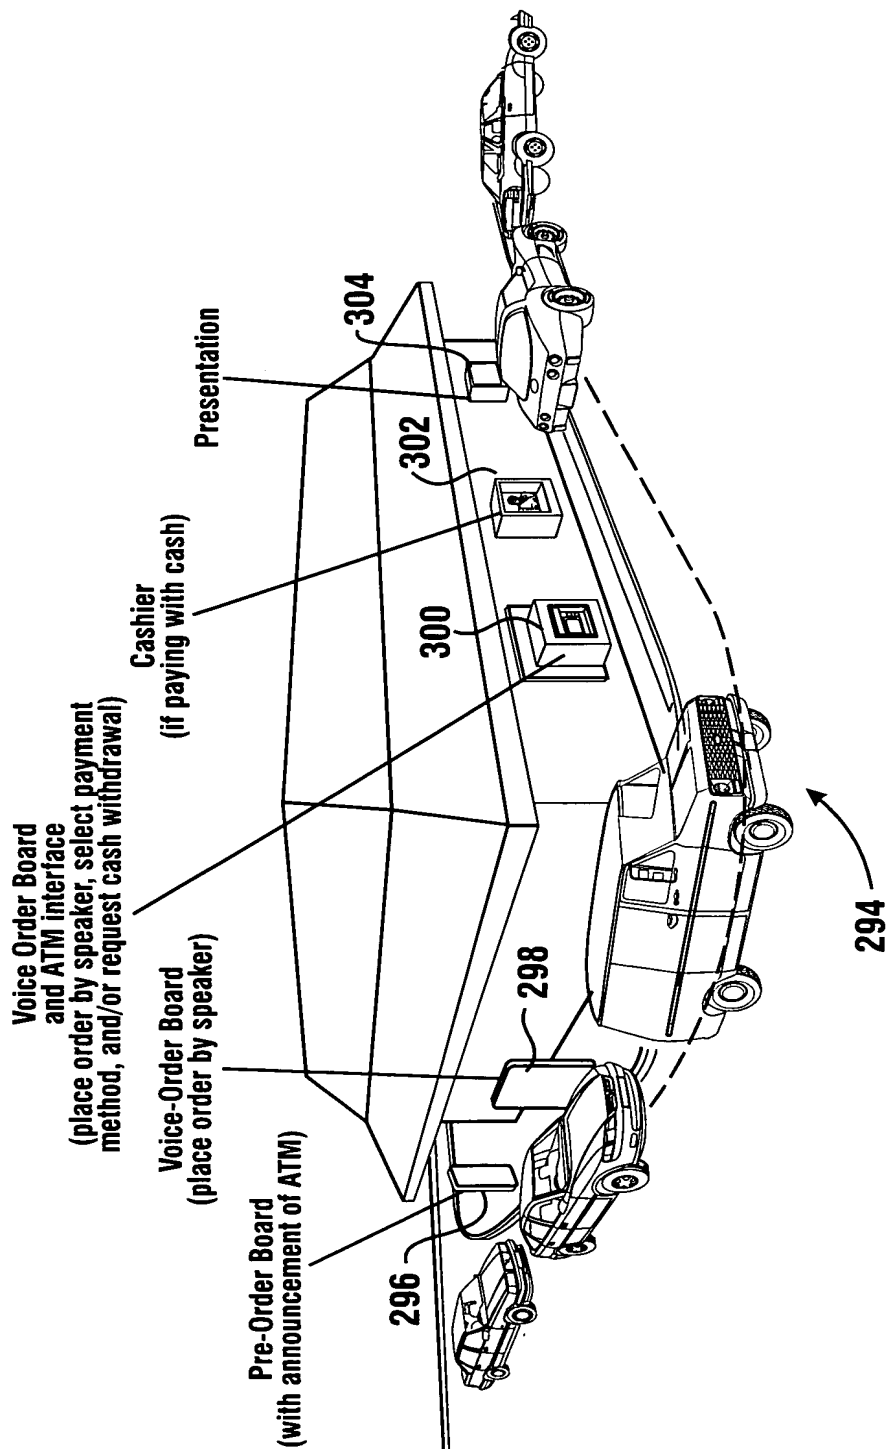 


FIG. 49

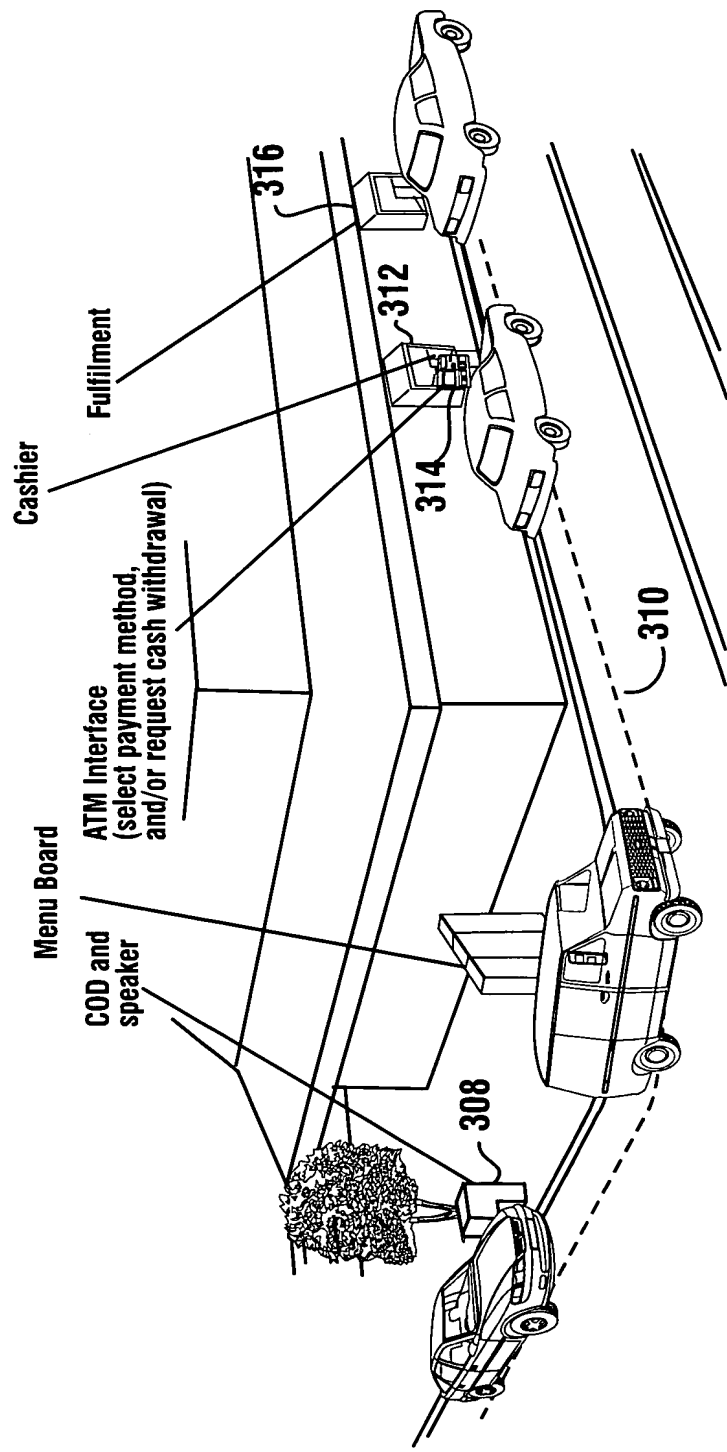 


FIG. 50

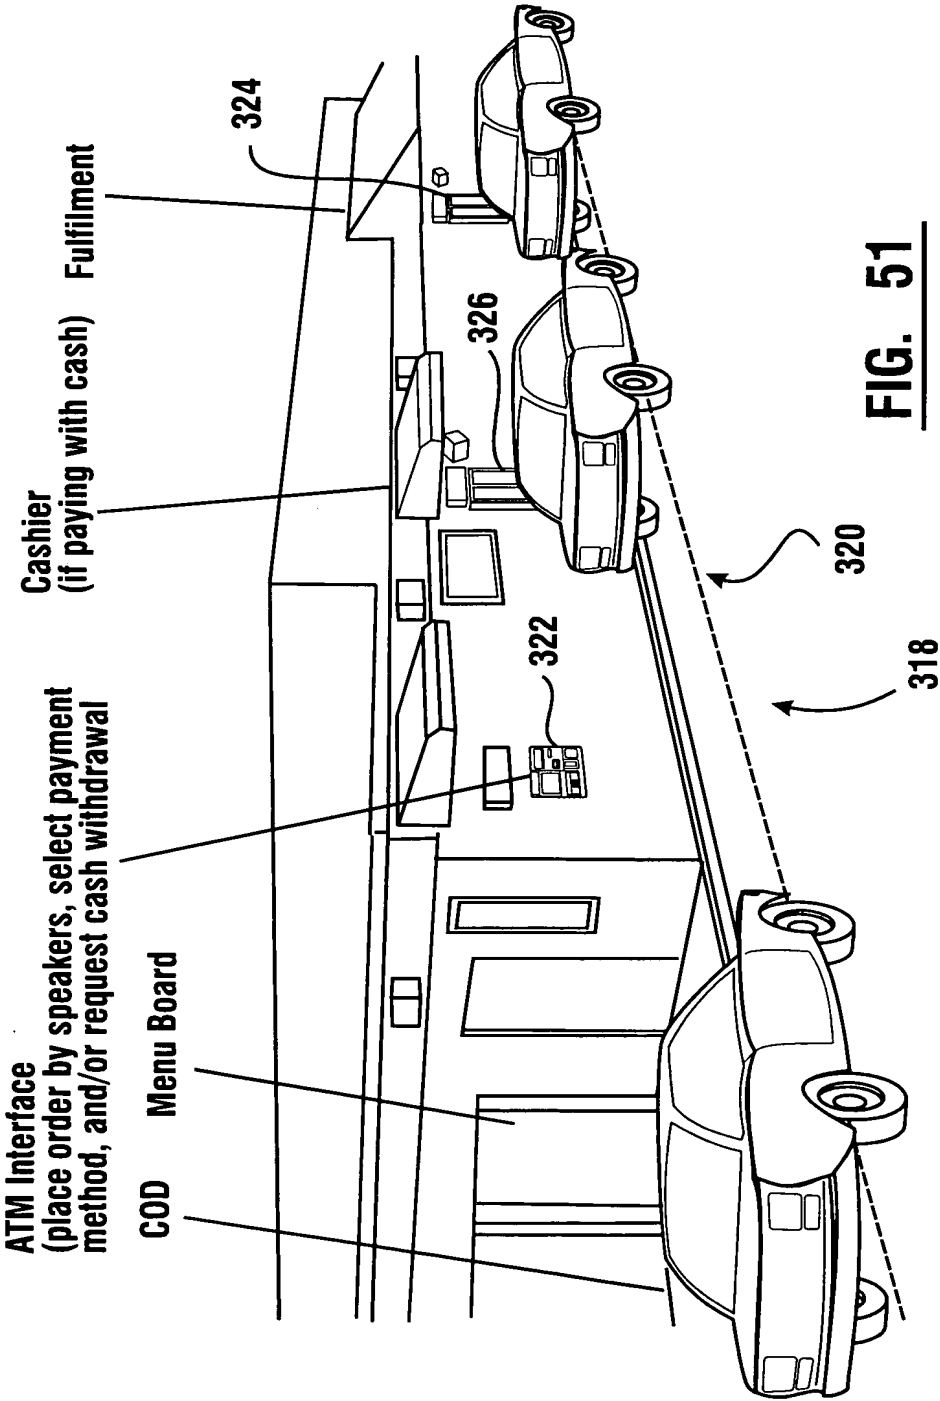
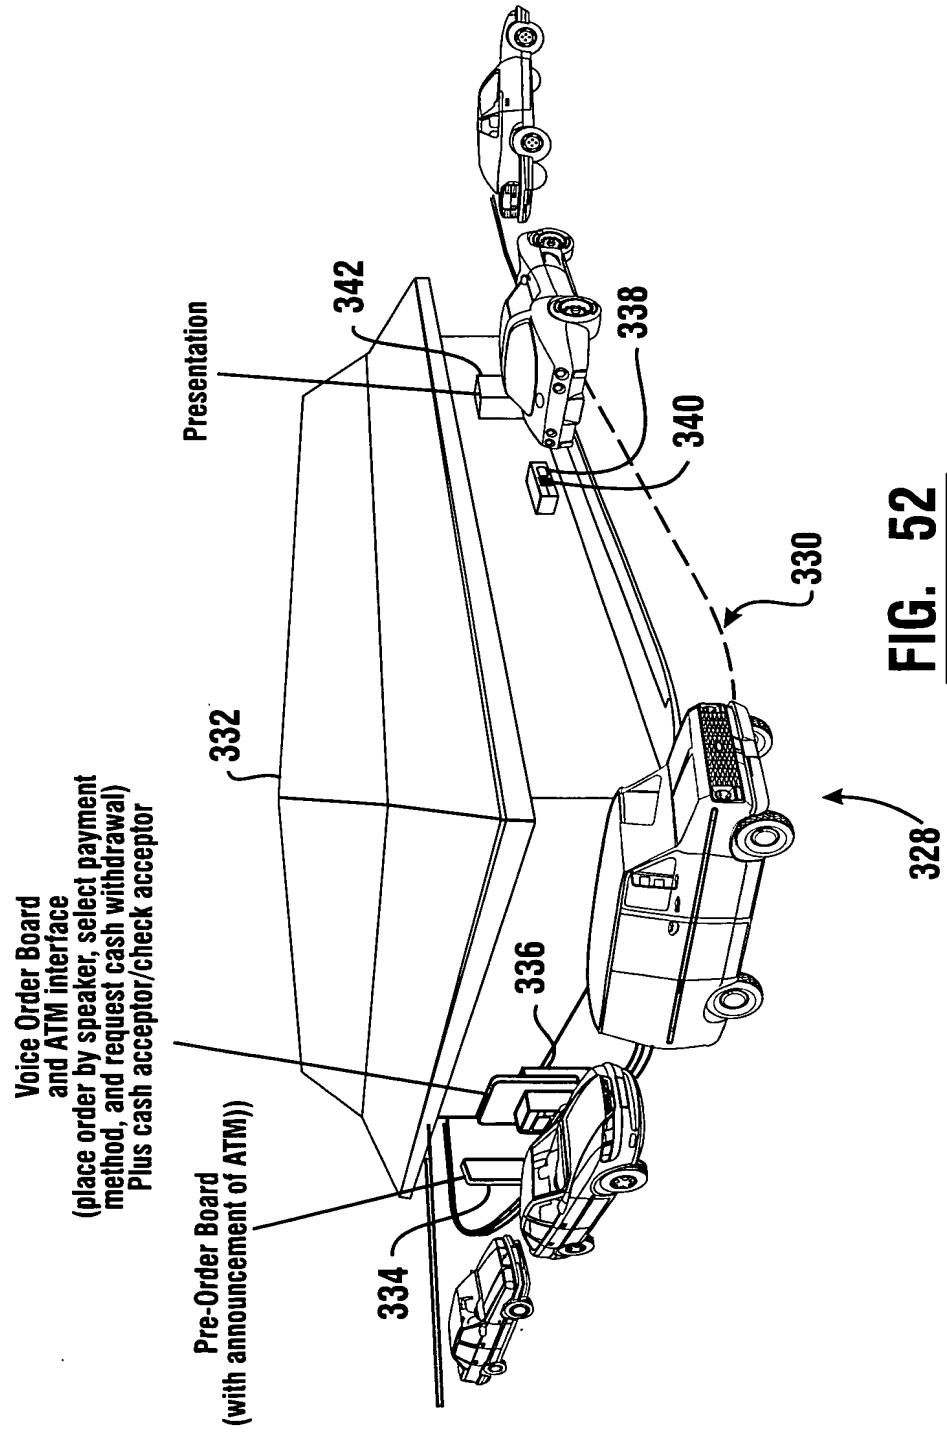 


FIG. 51

 


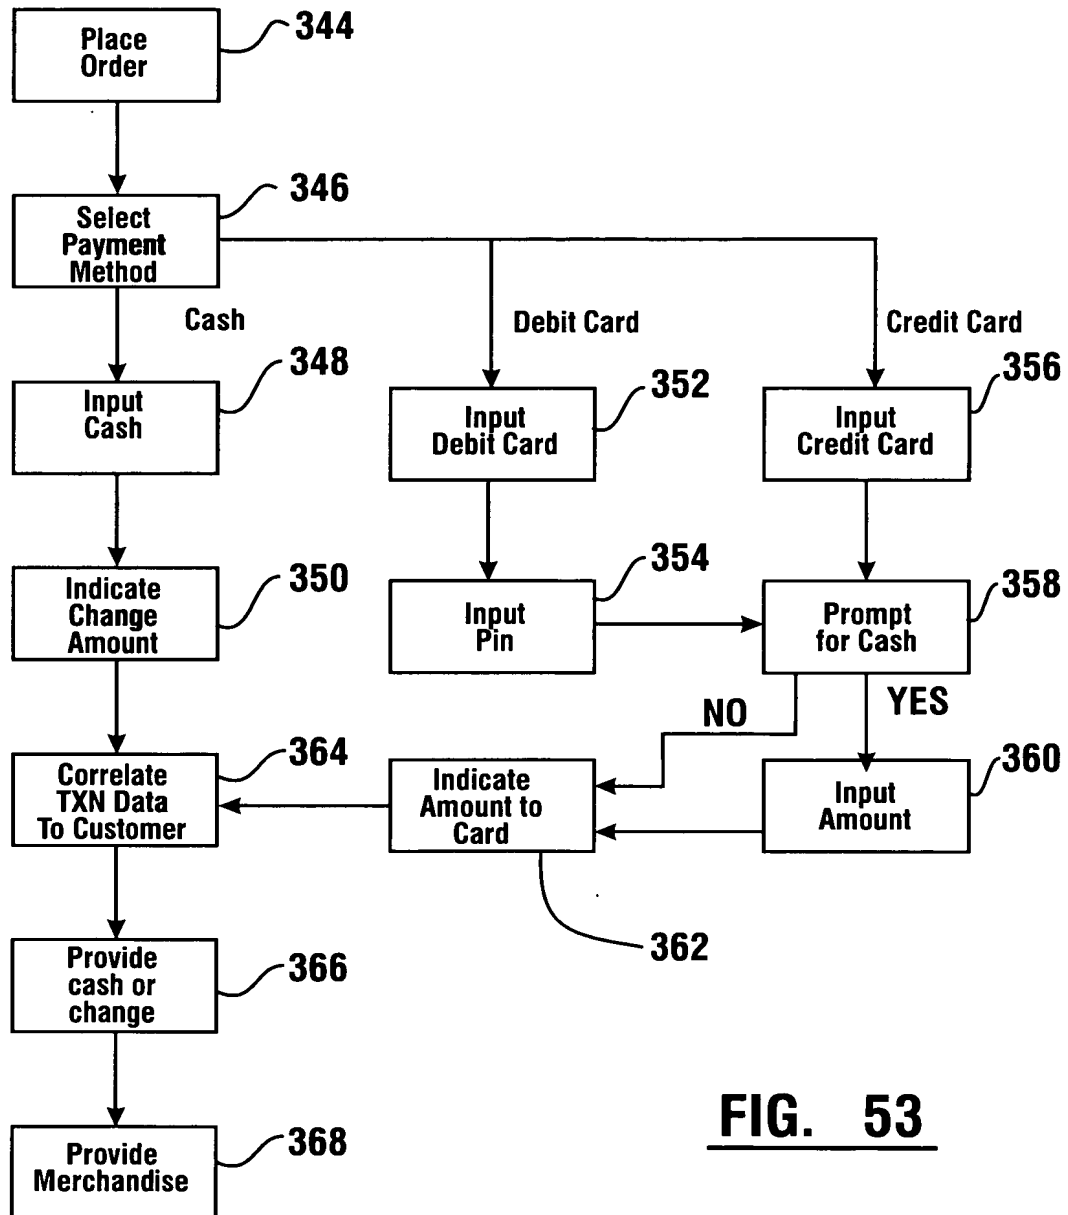 


FIG. 53

 
FIG. 54



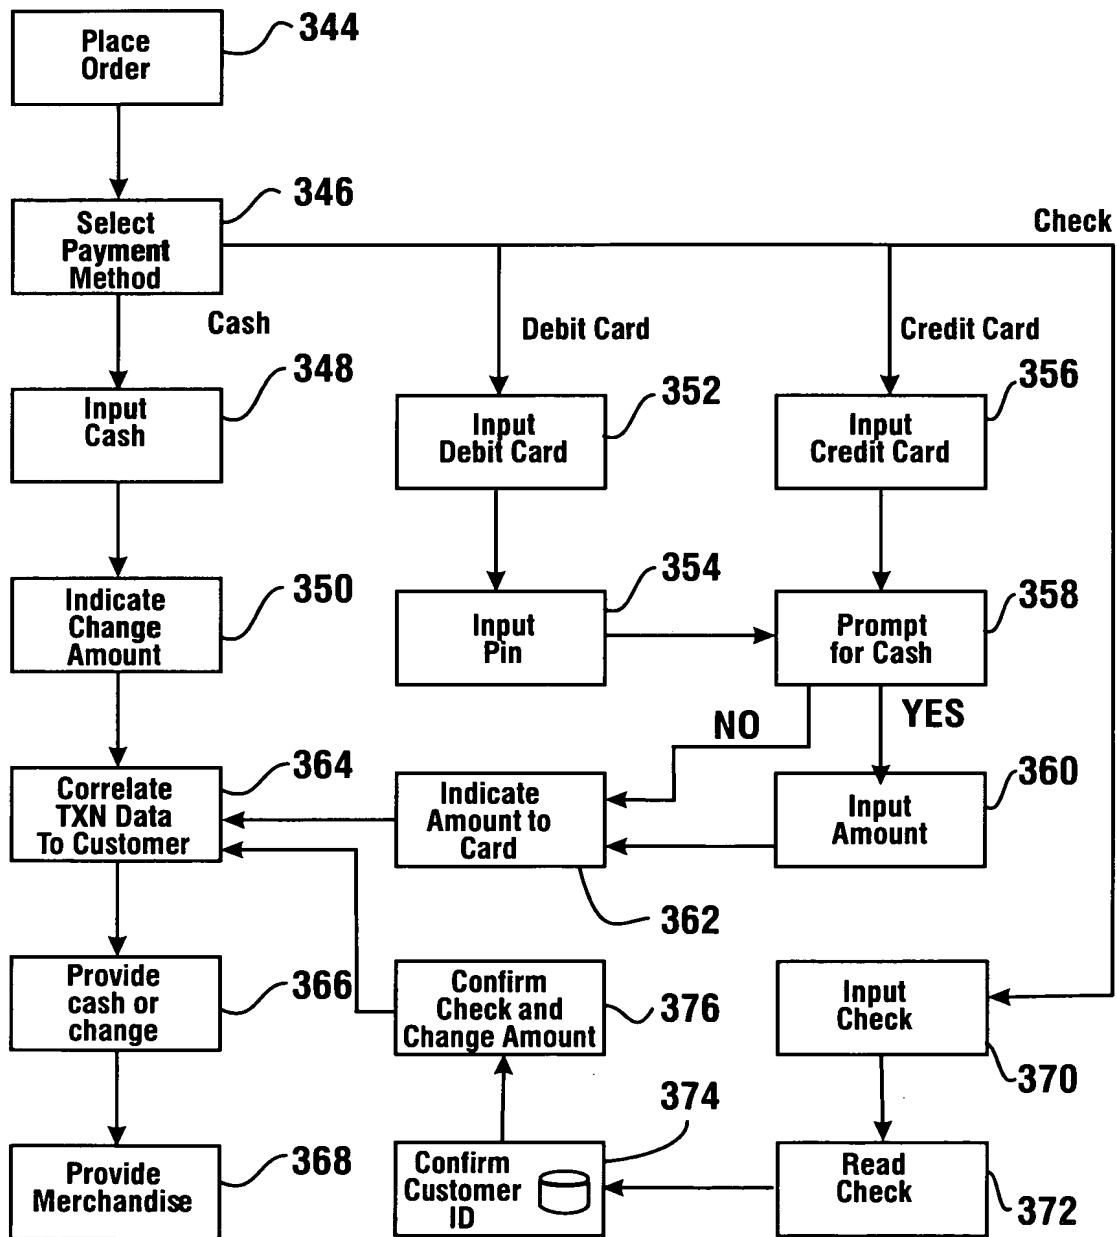

378

FIG. 55

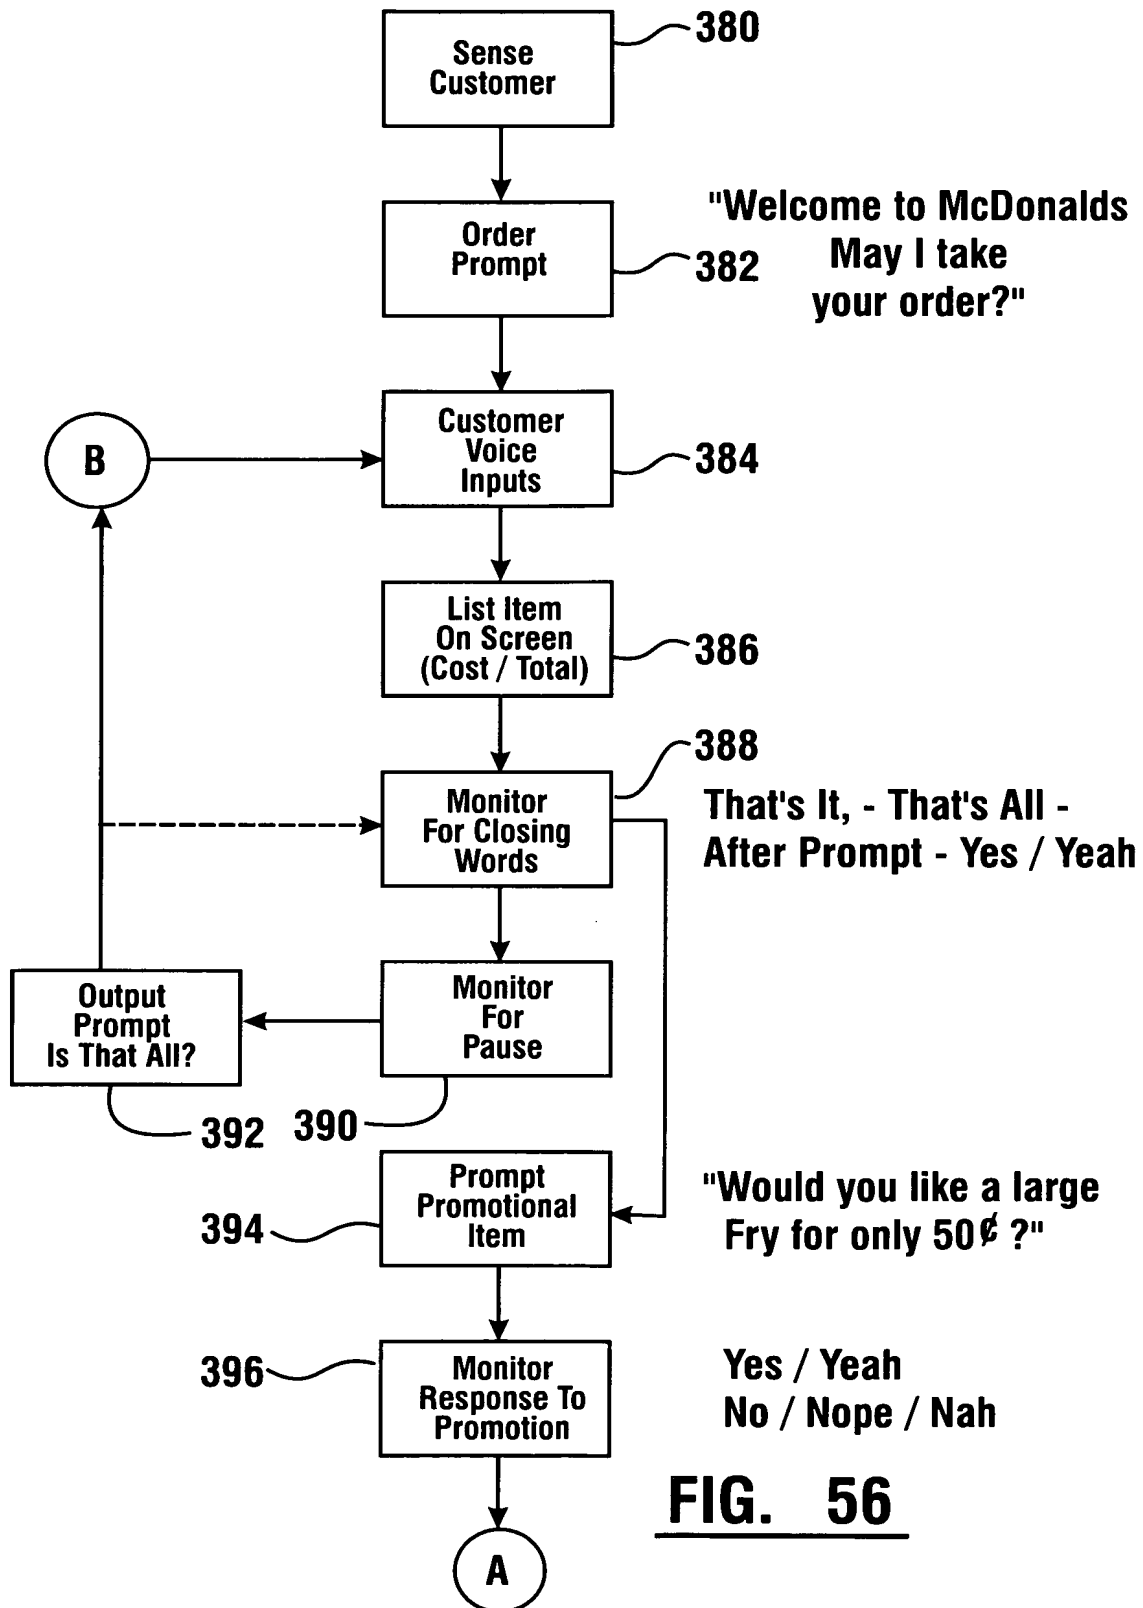 

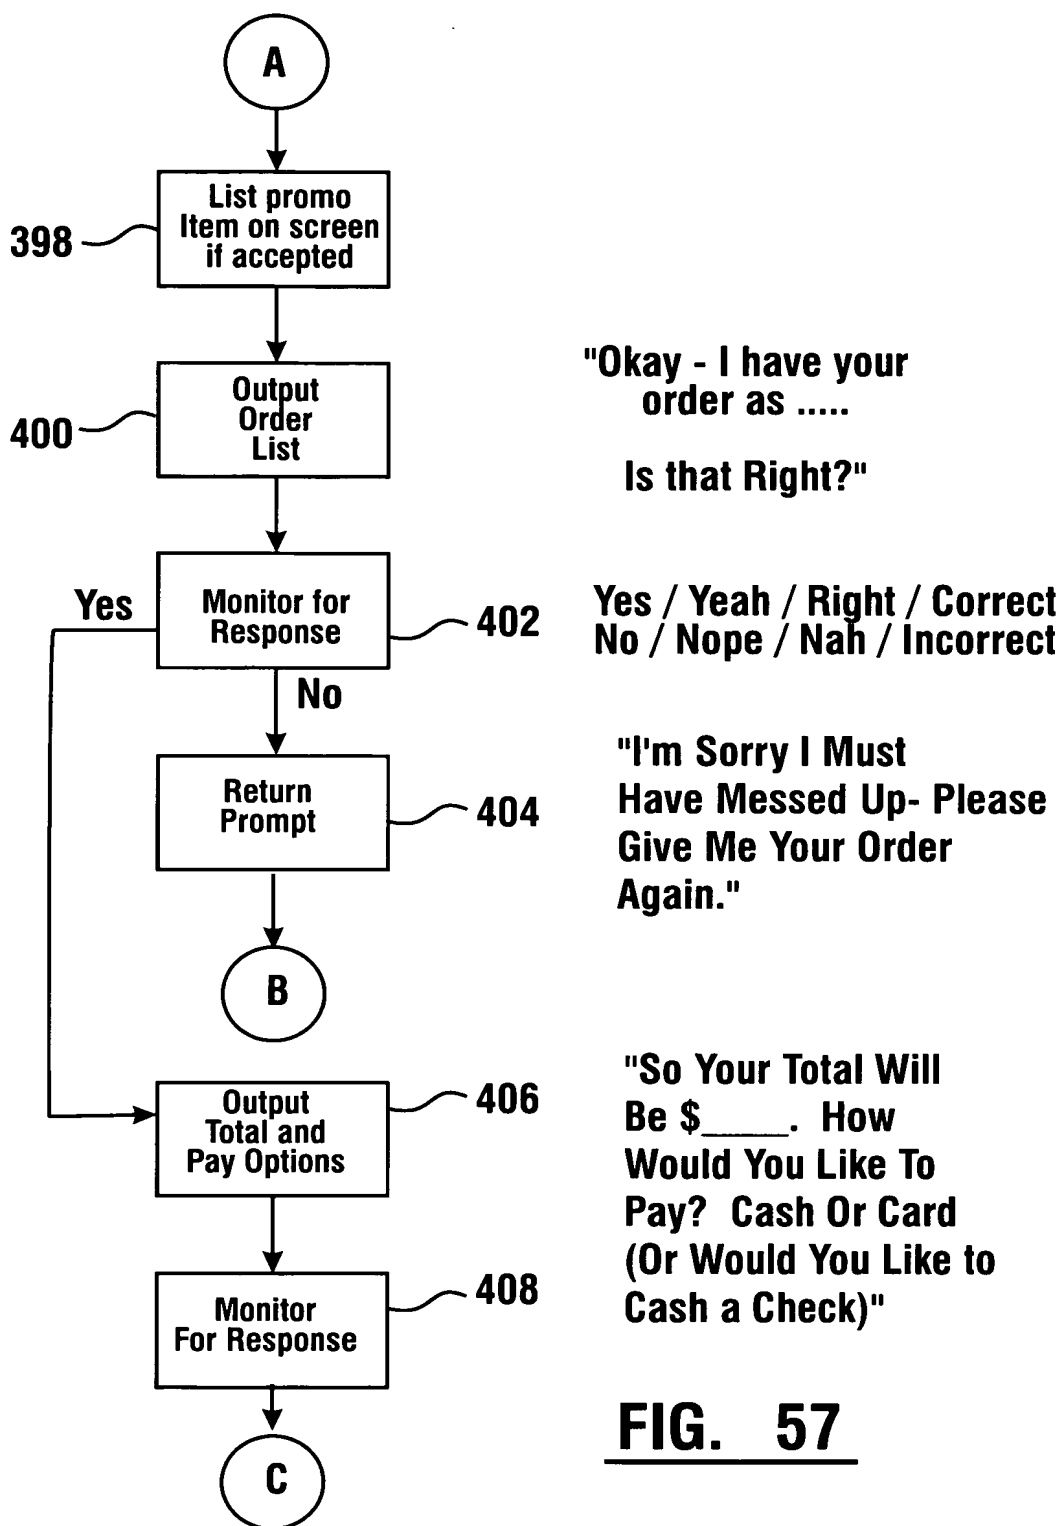
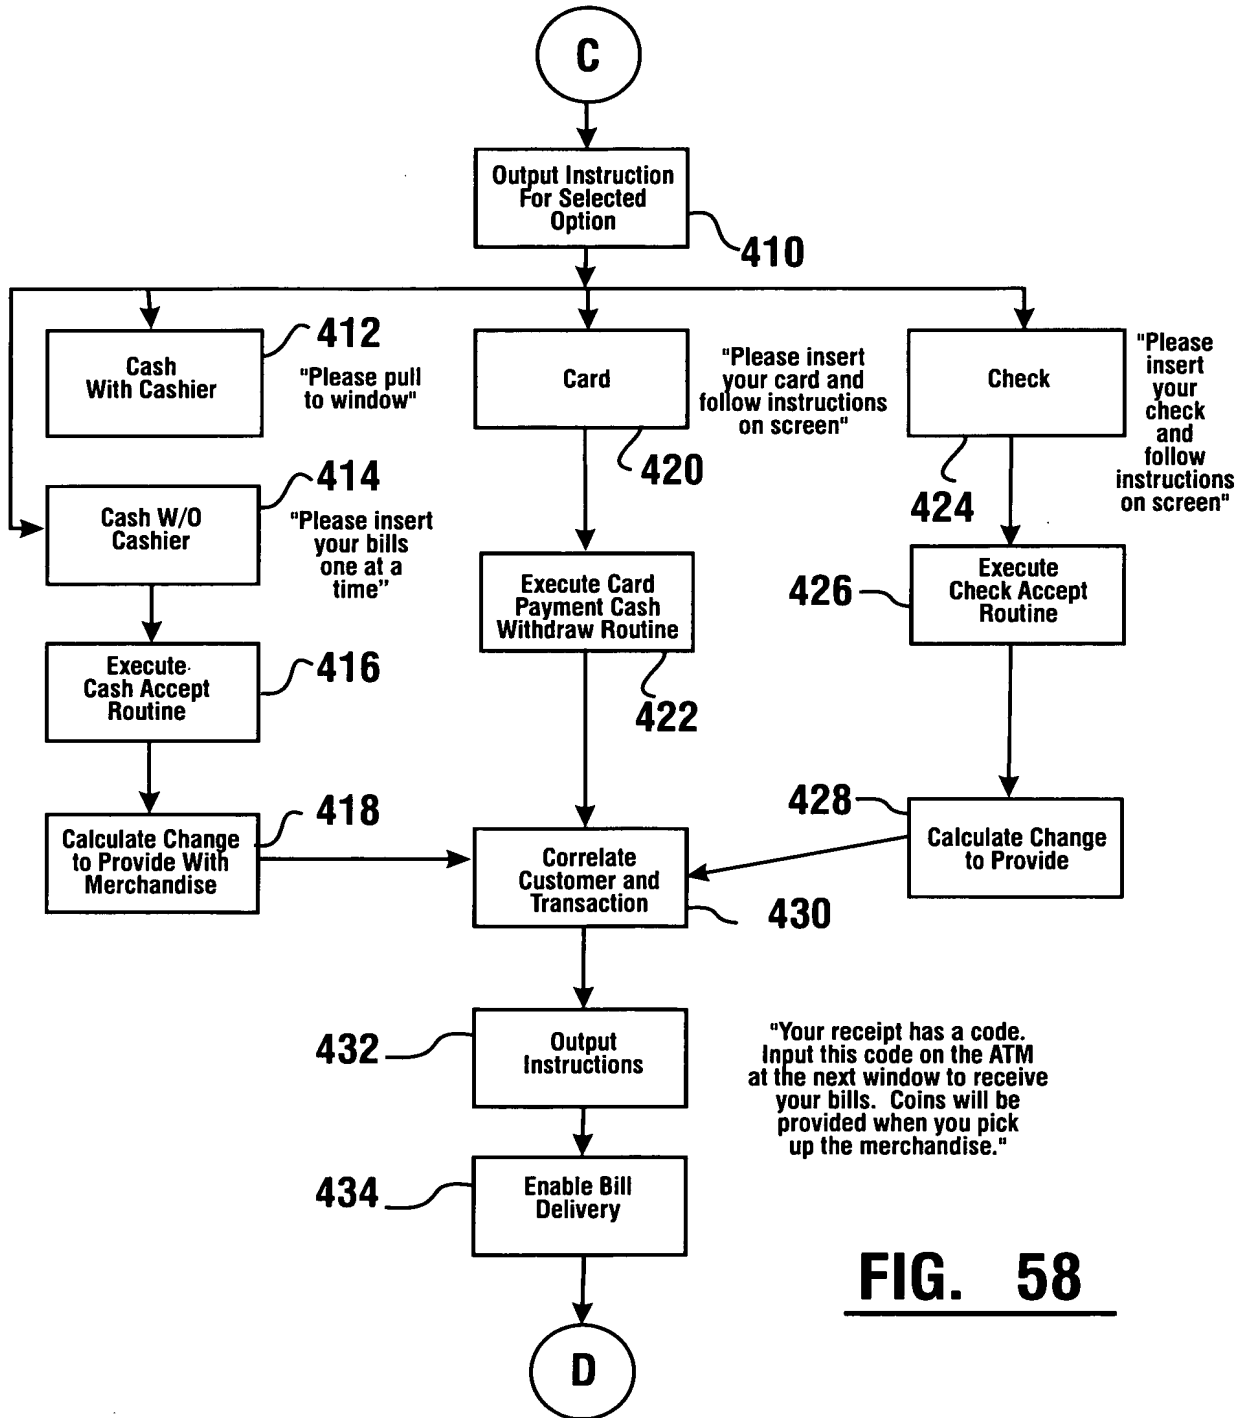 


FIG. 57

 

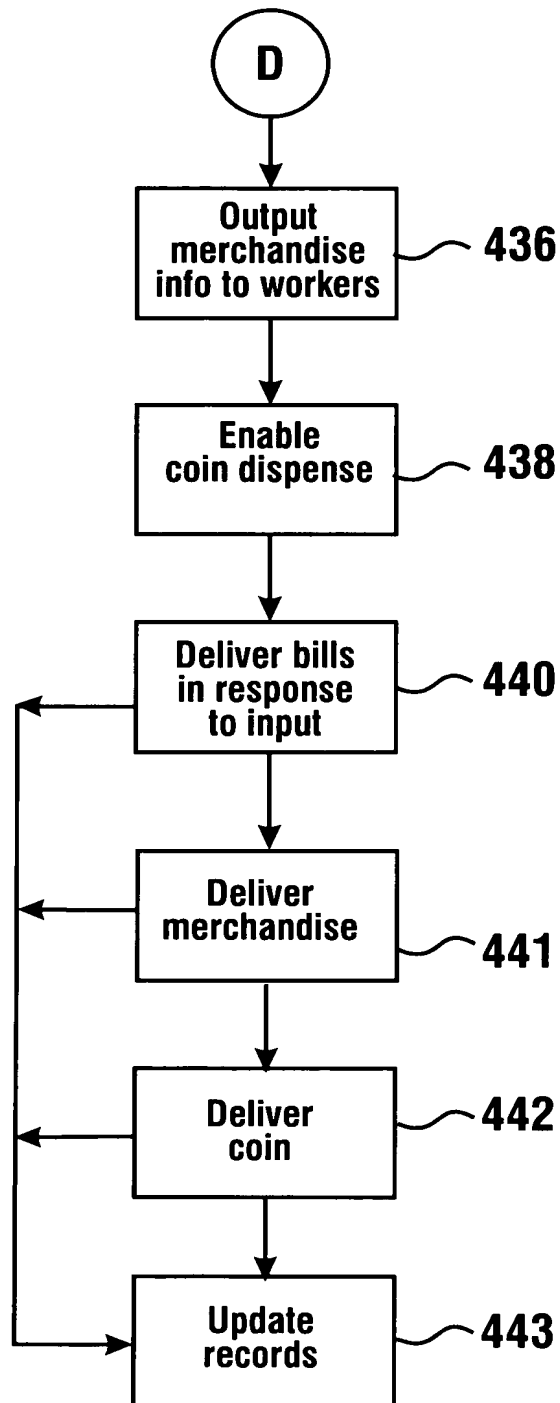 


FIG. 59